

ADL A1 DSD Playback Guide

Install playback software on Windows

1. ADL suggests using Foobar media player for DSD playback. Go to the following website and download and install the latest stable version of Foobar media player: <http://www.foobar2000.org/download>

Download foobar2000


Files released under the [foobar2000 license](#).

Release information can be found in the [change log](#).


Latest stable version

Download [foobar2000 v1.3.1](#)


2. Download and open the “foo_input_SACD” zip file from the following link: <http://sourceforge.net/projects/sacddecoder/files/latest/download>
3. Unzip the file using software and save the folder to hard drive.
4. Open up the folder and install 2 files listed below

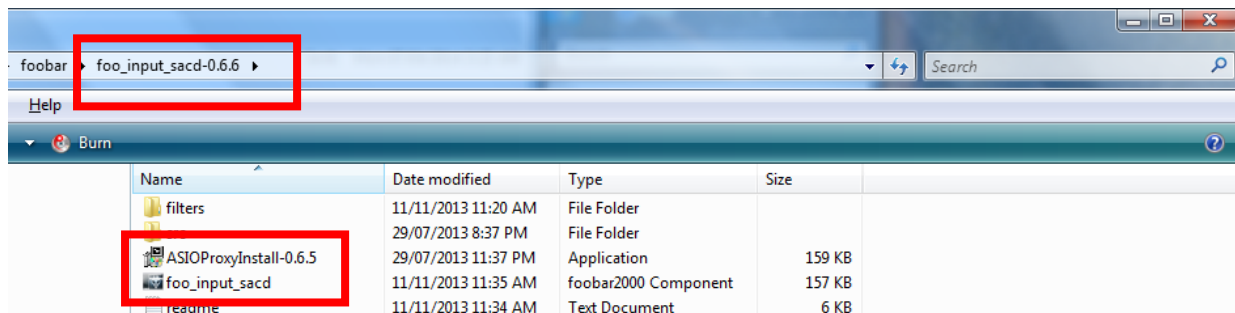

5. First double click on “foo_input_sacd.fb2k-component” for installation.
 - a. Click “Yes” to continue install of foo_input_sacd.fb2k-component.
 - b. Click “OK” (Foobar will automatically open)
 - c. Click “OK” again and Foobar will close and restart

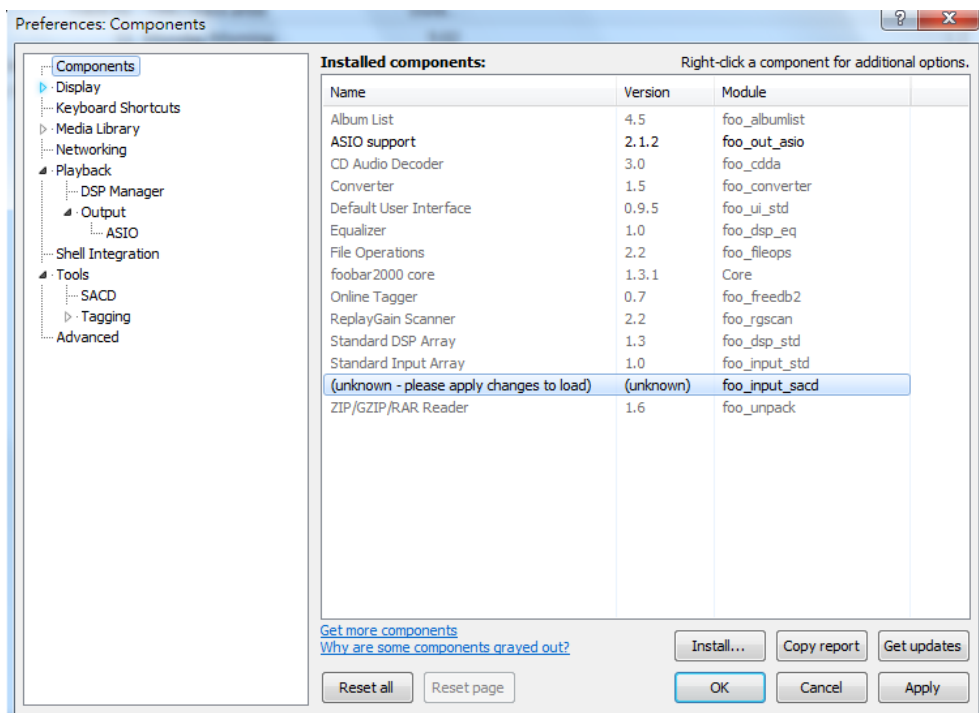

6. Double click on "ASIOProxyInstall-0.6.5.exe" for installation.
 - a. Click Next and continue with install.

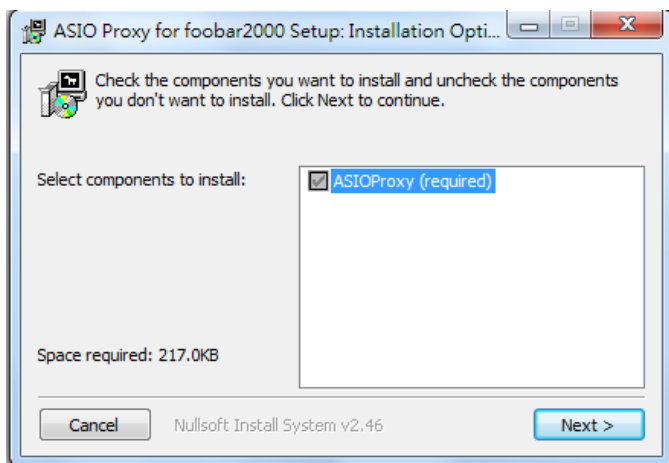

7. Download the ASIO plugin from http://www.foobar2000.org/components/view/foo_out_asio

foobar2000

Overview Download Components Screenshots Support SDK

ASIO support
By: Peter
Provides ASIO output support.


Version 2.1.2 highlights:
* Fixed phase inversion with 32-bit output.

Please note that this component is meant for systems where ASIO is the only available output method. It is highly recommended to use the default output modes instead of ASIO. Contrary to popular "audiophile" claims, there are NO benefits from using ASIO as far as music playback quality is concerned, while bugs in ASIO drivers may severely degrade the performance.



Current version
2.1.2, released on 2012-06-06

Links
[Download](#)
[Documentation](#)

8. Once downloaded, double click on "foo_out_asio.fb2k-component" for installation.
 - a. Click "Yes" to continue install of foo_out_asio.fb2k-component.
 - b. Click "OK" (Foobar will close and restart)

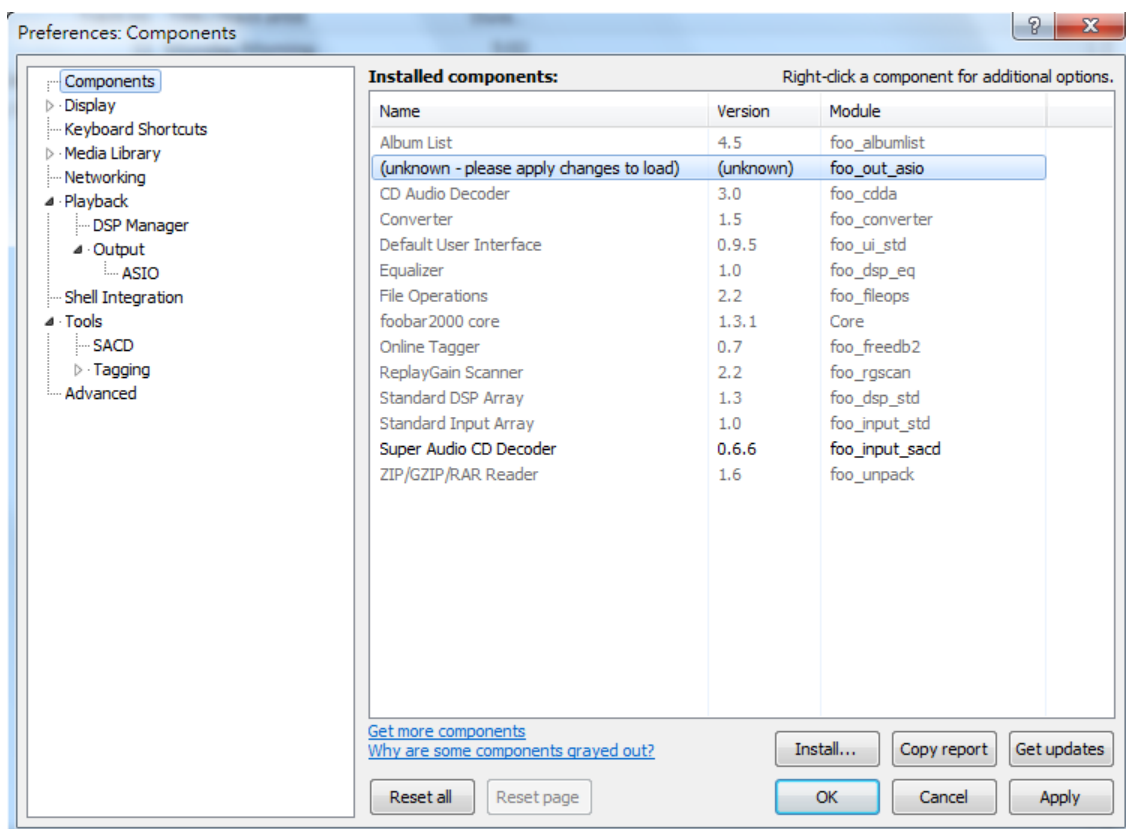


9. Once all installations have completed, check for Foobar output function for Device “ASIO: ADL A1 ASIO Driver”:
 - a. Go to Foobar “Preferences” on the “File” dropdown list
 - b. Select “Playback” and then “Output”
 - c. On the “Device” dropdown list select “ASIO: foo_dsd_asio” for DSD file playback.
 - d. Adjust the ASIO Buffer Size to 1030ms to ensure smooth playback.

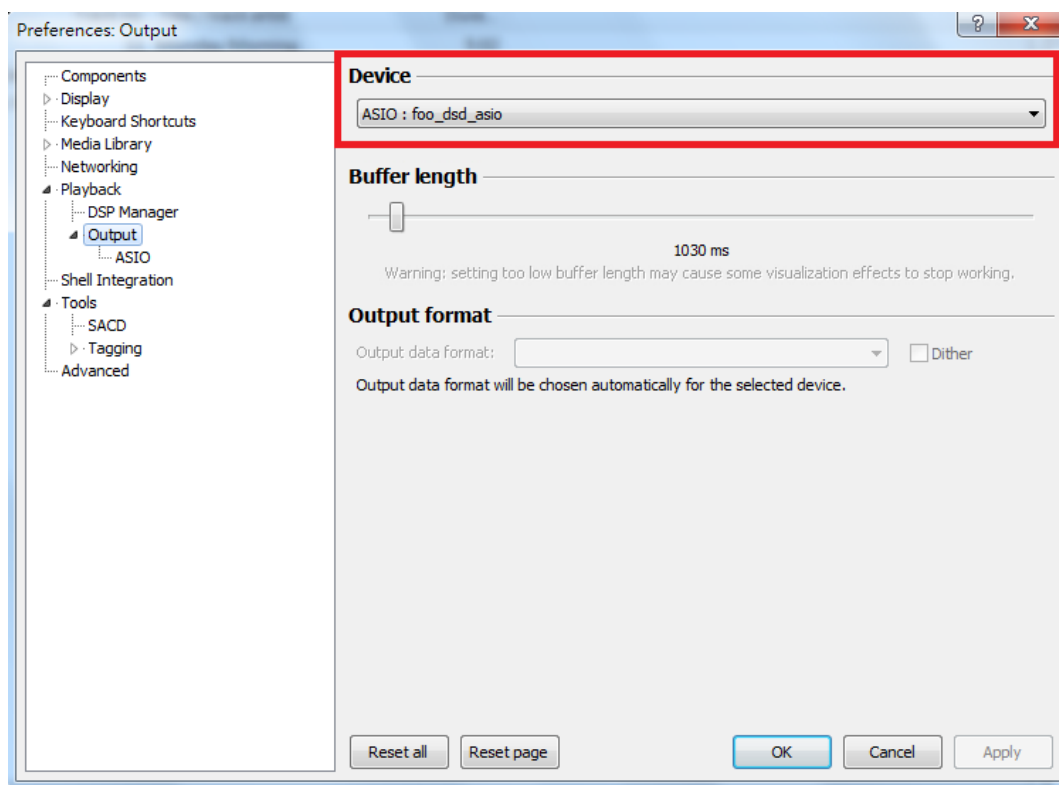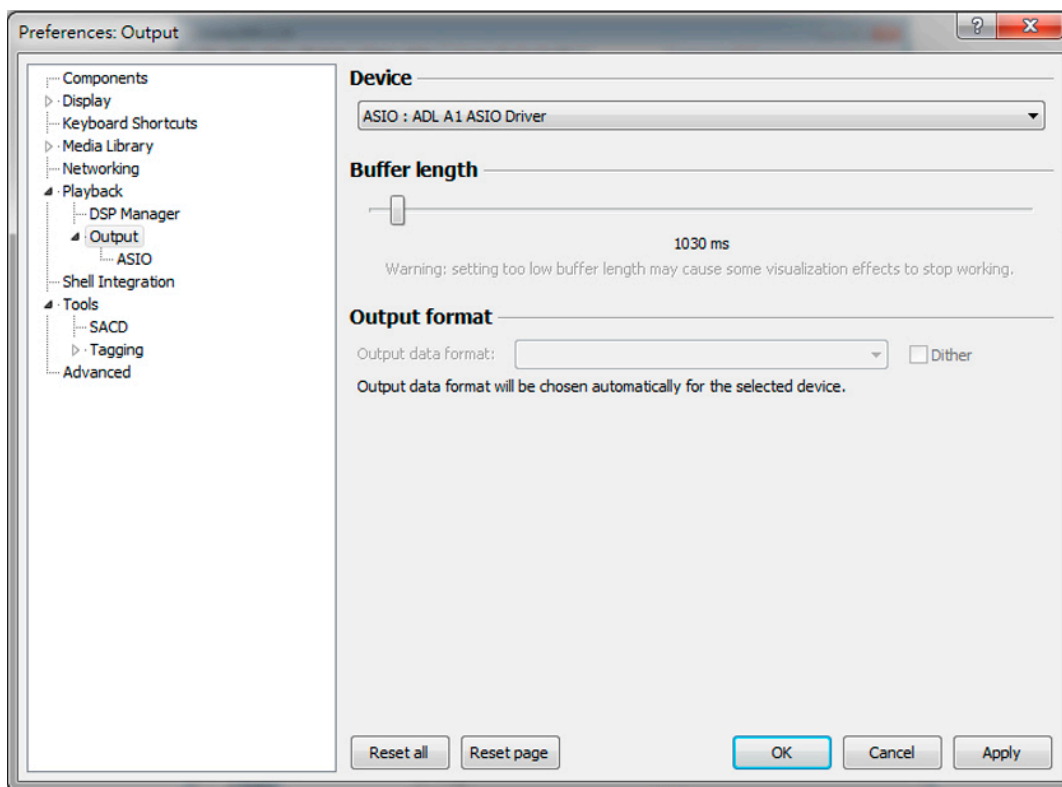

10. For DSD playback configure the ASIO output.

- a. Go to File > Preferences > Playback > Output > ASIO
- b. Under the “ASIO drivers” double-click on “foo_dsd_asio” to activate the driver’s control panel and change the settings accordingly.
- c. ASIO Driver: Select VIA ASIO Driver
- d. DSD Playback Method: Select 「DoP Marker 0x05/0xFA」
- e. PCM to DSD method: Select None
- f. Fs: Select DSD64
- g. DSD/PCM Transition: Select 0 ms
- h. Do not select “Use 64-bit ASIO drivers” (A1 support ASIO drivers 32-bit Max.)

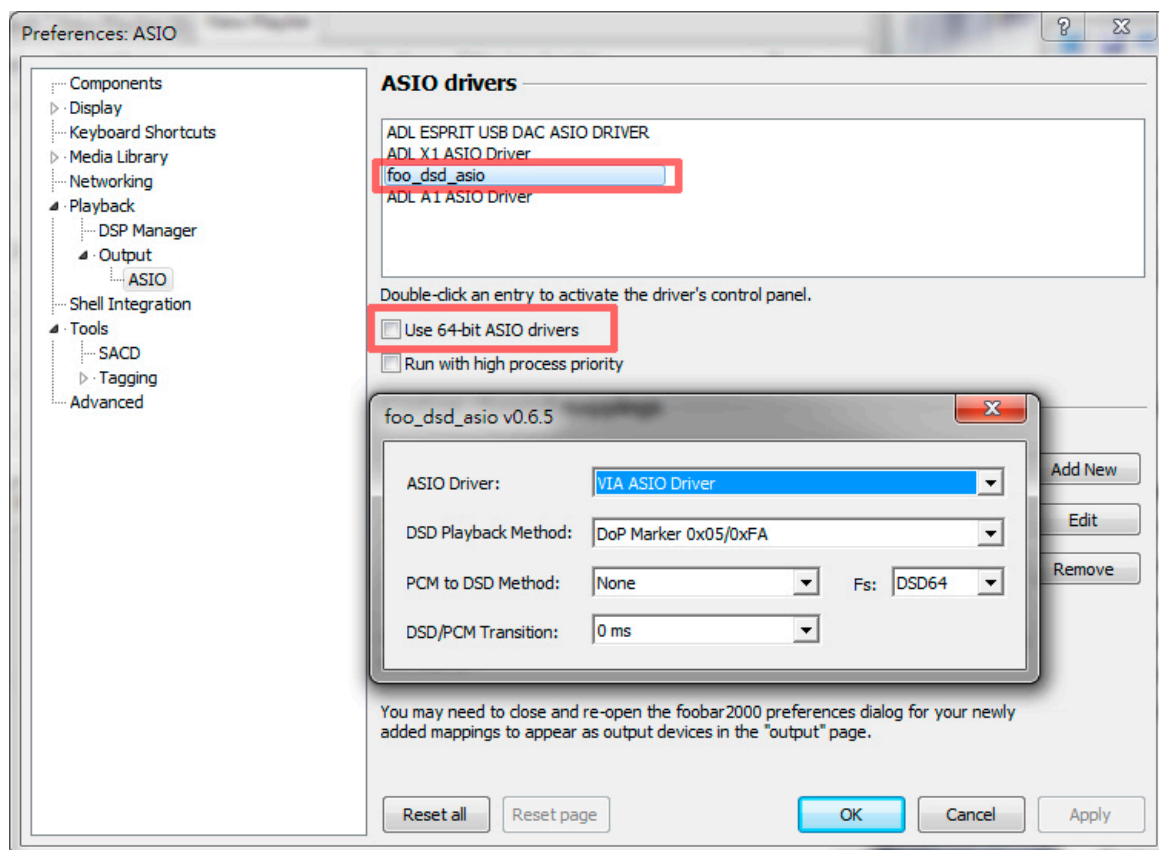

11. Configure the SACD plugin to play DSD (and not convert from DSD to PCM)

- a. Go to File > Preferences > Tools > SACD
- b. Change the settings accordingly.
- c. ASIO Driver Mode: Select DSD
- d. PCM Sample rate: Select 176400 and click “Apply” and “OK”

